

FUSE BLOCK SELECTION

The following guidelines should help to simplify the selection of proper fuse blocks:

1. Determine the system voltage

Since fuses are selected on the basis of system voltage, fuse blocks are selected to match the voltage rating of the fuse.

2. Determine the design short-circuit current

Available and/or design short-circuit current is an important consideration when determining the class of fuse and fuse blocks to use. If available short-circuit current cannot be determined, or if it will vary with equipment location, select fuses with a 200,000 ampere interrupting rating (A.I.R.) and mating fuse blocks with a withstand rating of 200,000 amperes for maximum safety.

Class H fuse blocks will accept Class H or K5 fuses (which have an interrupting rating of up to 50,000 amperes) and Class R fuses (which have a 200,000 A.I.R.). To prevent the possibility of inserting a fuse with the incorrect interrupting rating, the use of Class R fuse blocks is recommended for use with Class R fuses. Use Class H fuse blocks with Class H or K5 fuses. These fuse blocks are dimensionally the same, but the Class R fuse blocks incorporate a rejection feature which allows only Class R fuses to be inserted.



3. Determine the type and ampere rating of the fuse to be used

In addition to voltage and interrupting rating, as discussed above, the fuse's ampere rating, opening characteristics (fastacting or time-delay) and size are other important considerations in fuse selection. Once the fuse type is selected, the mating fuse block can be chosen. Fuse blocks are available in 30, 60, 100, 200, 400 and 600 amp ratings, and may be used with a fuse rated at the corresponding amperage rating or below. For example, a fuse block rated at 30 amperes may be used with a fuse rated from 0 to 30 amperes.

4. Determine if NEC, CSA, UL or other requirements are applicable

If fuse blocks will be installed in equipment to be submitted for agency approval, the requirements should be obtained from the approving agency in advance of fuse and fuse block selection.

5. Select the type of wire termination

A choice of three types of wire termination is available:

- a) Screw* for use with spade lugs or ring terminals.
- b) Screw with pressure plate* for use with solid or stranded wire without terminal. Recommended where vibration will be a factor.
- c) Box lug the most durable. For use with all types of solid wire and Class B and Class C stranded wire. Not for use with welding cable or other rope-stranded conductors.
- * 1/4" Quick connect terminals rated for up to 20A are available on the midget and Class CC fuse blocks.



6. Decide on the number of poles in each block

The number of poles for each set of fuses is determined by the characteristics of the circuit. Whether to gang the fuse blocks into long strips will be determined by the available space and by the type of wire being used.

7. Determine if fuse clips need to be reinforced

Fuse clips may have a tendency to lose some of their tension over a period of time. This may be prevented by specifying reinforced fuse clips. Reinforced clips are standard on certain fuse blocks (see individual product pages).

Ordering information

The Littelfuse fuse block part number consists of 5 or 6 components, as shown below and in the individual fuse block data tables.

ORDERING INFORMATION

For all Class R, H, J, T and 15, 20 & 60A H25030-1S **Class G Fuse Blocks:** Î Voltage Poles JL Class ittelfuse Amperage Connector Type For all Class CC, 600 30 M-2 P Q Midget and 30A Class G Fuse Blocks: Voltage Poles -_ittelfuse UL Class Connector Type Amperage **Quick Connect**

B-I-A Vertriebs GmbH Lagerstr. 1 D-64331 Weiterstadt Telefon (06151) 8786-0 Fax +49-6151-8786-22 -Polling (06151) 8786-42

Internet Homepage: http://www.BiaGmbH.com Email: info@BiaGmbH.com Weitere Typen auf Anfrage. Änderungen vorbehalten. Abmessungen in mm. Further items on request. Dimensions mm. Subject to change without notice.

